

GTM-201-3GWA FAQ

Tables of Content

Q01 : How to test SMS function of GTM-201 in windows and XP8000?3
**Q02 : How to test SMS function of GTM-201-3GWA on ViewPac or WinPac (WinCE)?
.....5**
Q03 : Where to download GTM-201-3GWA driver for windows 7?.....6
Q04 : Why the SMS that I received from GTM-201-3GWA is scrambled?.....6
Q05 : Why GTM-201-3GWA doesn't work well while using demo code?.....6
**Q06 : Why 3-wire RS232 can't connect to the internet by using dial-up internet access?
.....7**


Q01 : How to test SMS function of GTM-201 in windows and XP8000?

A01 :


(1) Please download the program for testing from link: (all files in this folder)

http://ftp.icpdas.com/pub/cd/usbcd/napdos/3g_modem/gtm-201-3gwa/software/demo/gsmnetdemo/bin/release/

(2) First, please execute "gsmnetdemo.exe". Please input the COM port number of the modem, and then click button "Initialize Modem".

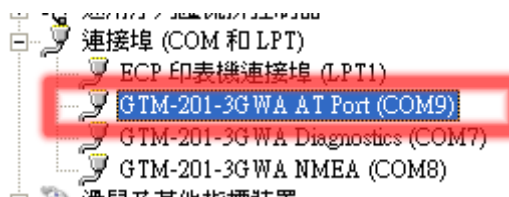

You will look the screenshot as below after waiting a moment:

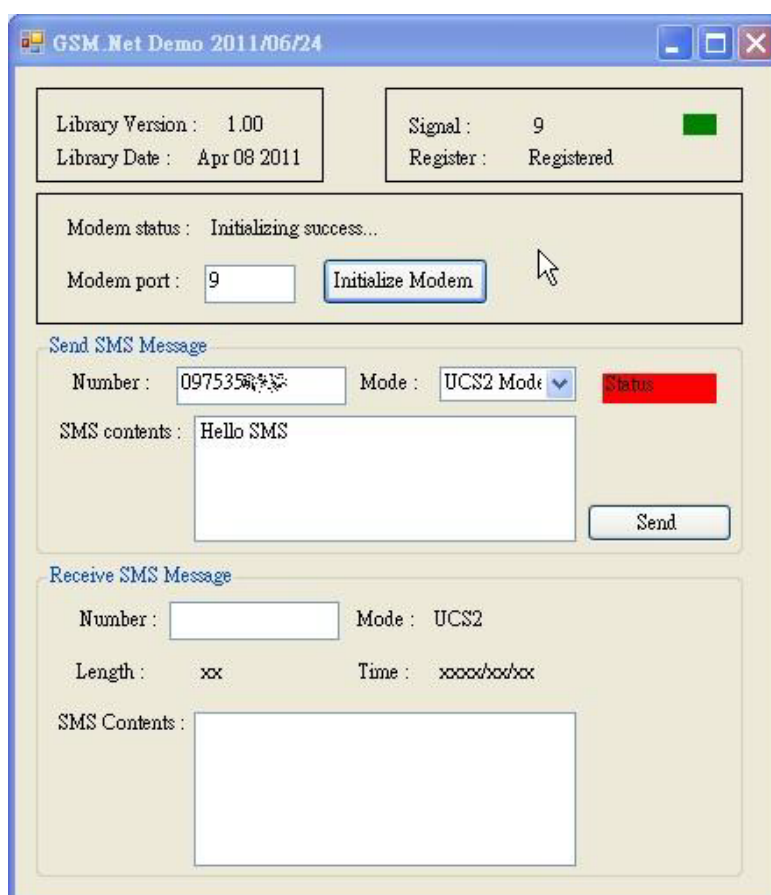

(3) Please type the data:

Number : the phone number that you want to send

Mode : "UCS2" mean Uni-code, "7-bits" just accept English and Number

 
SMS contents : the string that you want to send

And click "Send", the program will start to send SMS.

(4) If you send success, the screenshot will like below.

(in this case, the phone number for Sending = the phone number for Receiving)

If fail, please check that your SIM Card is ready for Sending SMS.

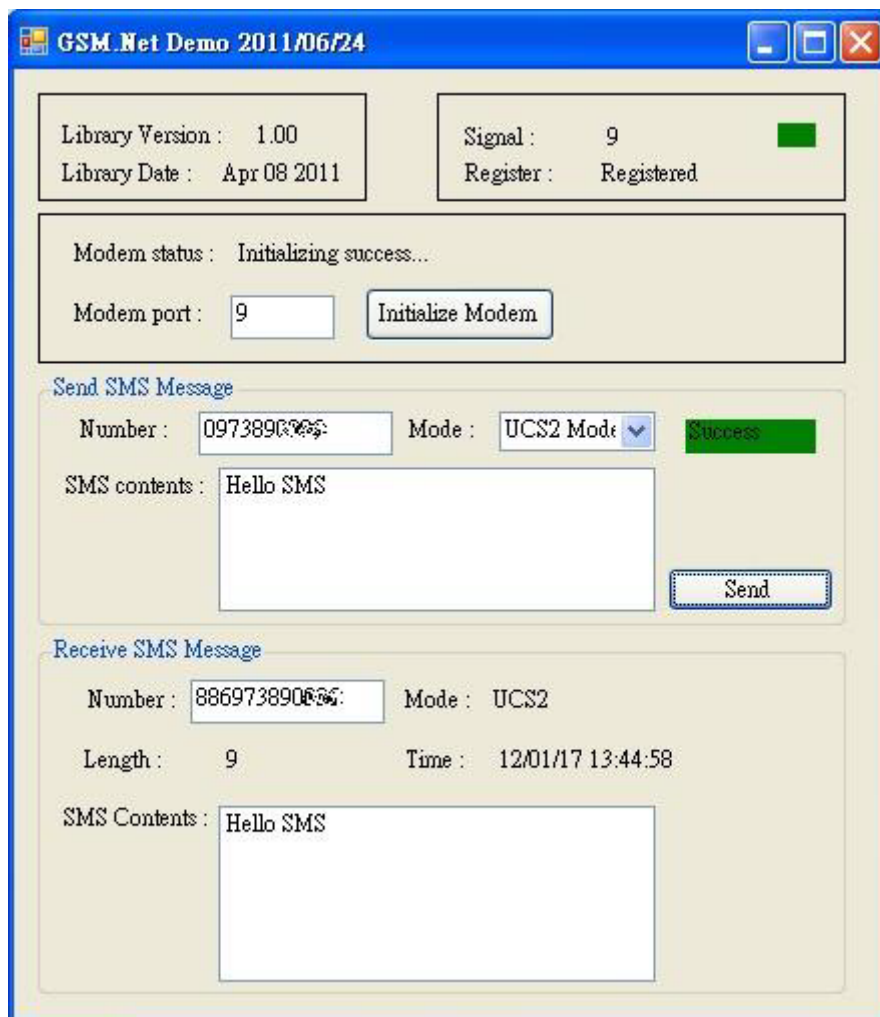

Q02 : How to test SMS function of GTM-201-3GWA on ViewPac or WinPac (WinCE)?

A02 :


(1) Please download the program for testing from link: (all files in this folder)

ftp://ftp.icpdas.com/pub/cd/usbcd/napdos/3g_modem/gtm-201-3gwa/software/demo/gsmcenetdemo/bin/release/

(2) First, please execute "gsmcenetdemo.exe".

Please input the COM port number of the modem, and then click the button "Initialize Modem".

You will see the screenshot as below after waiting a moment:

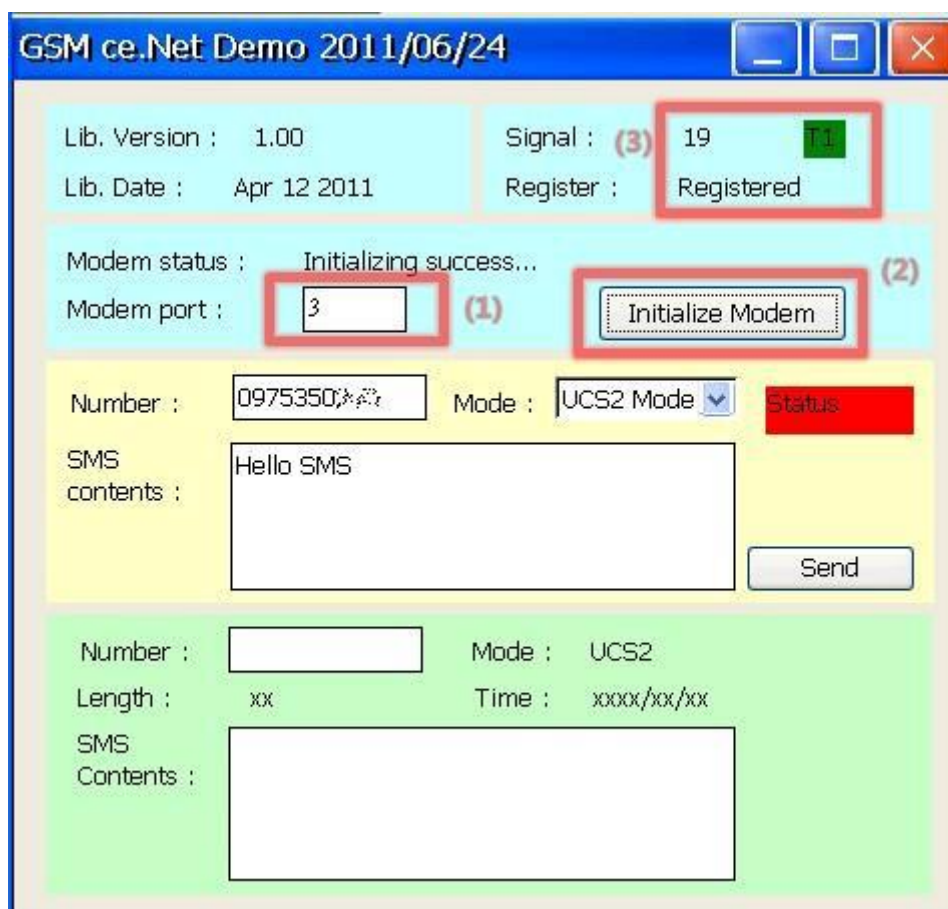

(3) Please type the data:

Number : the phone number that you want to send

Mode : "UCS2" means Uni-code, "7-bits" just accept English and Number

 
SMS contents : the string that you want to send

And click "Send", the program will start to send SMS.

(4) If you send successfully, the screenshot will look like below.

(In this case, the phone number for Sending = the phone number for Receiving)

If fail, please check that your SIM Card is ready for Sending SMS.

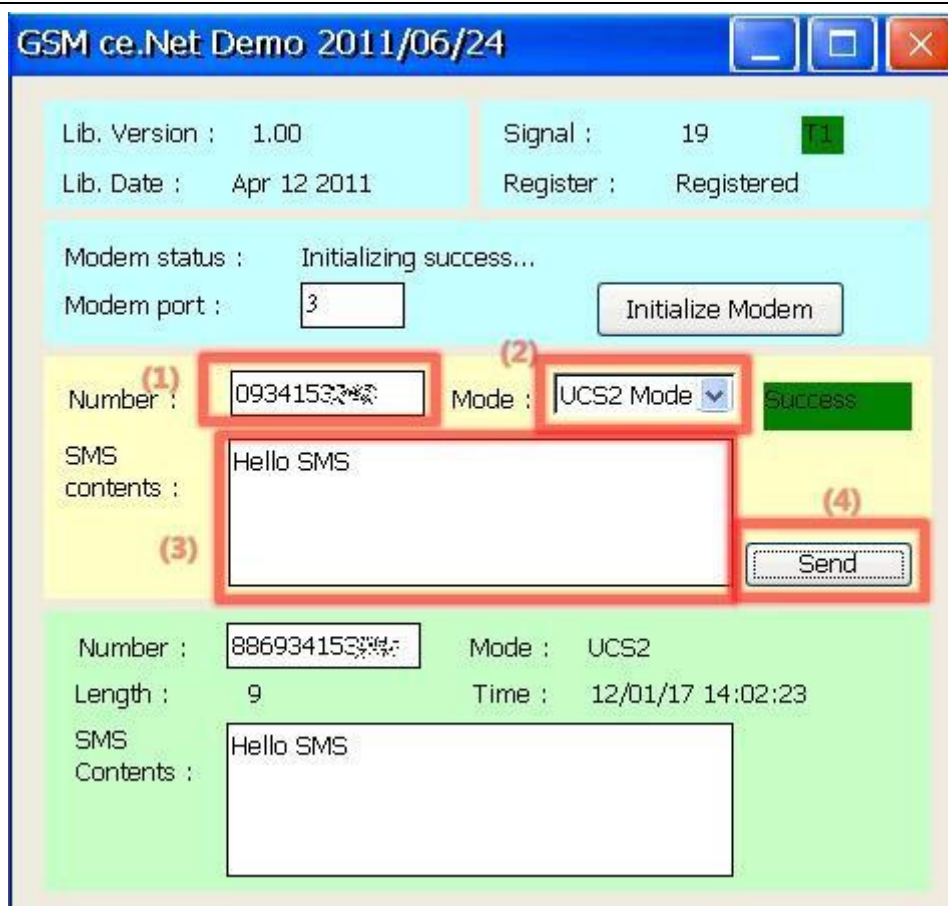

Q03 : Where to download GTM-201-3GWA driver for windows 7?

A03 :

Download driver for 1.1 version. Download site:

ftp://ftp.icpdas.com/pub/cd/usbcd/napdos/3g_modem/gtm-201-3gwa/software/driver/

Q04 : Why the SMS that I received from GTM-201-3GWA is scrambled?

A04 :

An error occurred while decoding, please contact your software vendor.

Q05 : Why GTM-201-3GWA doesn't work well while using demo code?

A05 :

The GPRS lib need to be changed to GSM lib, please refer to the following sites:

http://m2m.icpdas.com/GSM_Library.html

Q06 : Why 3-wire RS232 can't connect to the internet by using dial-up internet access?

A06 :

Please refer to the following steps.

